


Thank you for purchasing this clock. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Instruction for use

1. **IMPORTANT** – Turn the hands clockwise
2. Set hands to correct time before installing batteries
3. Insert the batteries. 2 x C to power birdsongs and 1 x AA to power quartz movement and a pendulum.
4. Use the volume button to adjust to required level.
5. Press the "SET" button from 0 to 23 times, and the voice coincides with the time now
6. The first bird sound will start at 6:00am
7. The bird sound automatically switched off from 22:00pm to 5:00am
8. If the bird does not work at the correct time, remove all batteries and refer back to point (1)

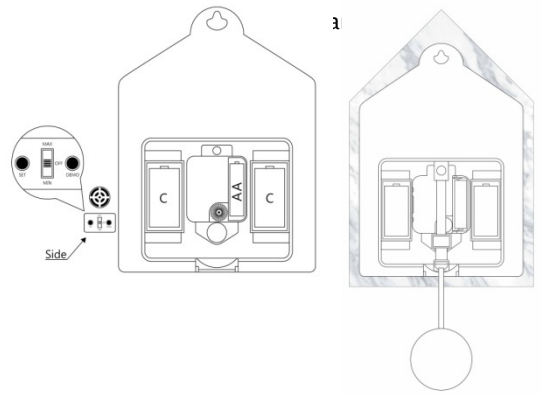

Current time	5:00 ~ 5:59	6:00 ~ 6:59	7:00 ~ 7:59	8:00 ~ 8:59	9:00 ~ 9:59	10:00 ~ 10:59	11:00 ~ 11:59	12:00 ~ 12:59	13:00 ~ 13:59	14:00 ~ 14:59	15:00 ~ 15:59	16:00 ~ 16:59
Setting times	0	1	2	3	4	5	6	7	8	9	10	11

Current time	17:00 ~ 17:59	18:00 ~ 18:59	19:00 ~ 19:59	20:00 ~ 20:59	21:00 ~ 21:59	22:00 ~ 22:59	23:00 ~ 23:59	24:00 ~ 0:59	1:00 ~ 1:59	2:00 ~ 2:59	3:00 ~ 3:59	4:00 ~ 4:59
--------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	--------------	-------------	-------------	-------------	-------------

Setting times	12	13	14	15	16	17	18	19	20	21	22	23
---------------	----	----	----	----	----	----	----	----	----	----	----	----

Changing the batteries

Batteries should be removed and replaced by adults only.

To change the batteries, insert 2 x C and 1xAA battery according to the (+) and (-) symbols in the battery compartment

Rechargeable batteries must not be used

Only use recommended batteries or those of the same or equivalent type.

Do not mix old and new batteries or batteries of different types.

Batteries are to be inserted with the correct polarity.

The supply terminals are not to be short-circuited.

Remove exhausted batteries from item.

Remove batteries if equipment is not used for extended periods of time.

Do not attempt to recharge non-rechargeable batteries.

Batteries contain substances that may be harmful to the environment and human health.

Keep out of the reach of children and seek immediate medical help if swallowed.



This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open outer casing.

Warning! Keep out of the reach of young children as may contain small parts which could represent a choking hazard.



Please retain this information leaflet for future reference.