


## OPERATING MANUAL

- (A) Remove the back cover and insert three "C" batteries(not includes)into compartment①, then the timekeeping will begin.
- (B) Hanging the pendulum in this holder②, place chain hooks on the weight rings and hang the carved faux weights on chains attached to the bottom of case.
- (C) Gently push pendulum to one side to start swinging motion.
- (D) Move the minute hands to the correct time by hand.
- (E) Push the cuckoo adjust button③ to check the current cuckoo hour.
- (F) Adjust the cuckoo hour by pushing the button③ until matches the correct time.
- (G) Switch the volume control④ (high-low)to meet your need.
- (H)Please change new battery in time in case of abnormal cuckoo sound and cuckoo's not coming out when alarms.
- (I) We recommend that the batteries should be changed twice a year at least for optimum performance and enjoyment.

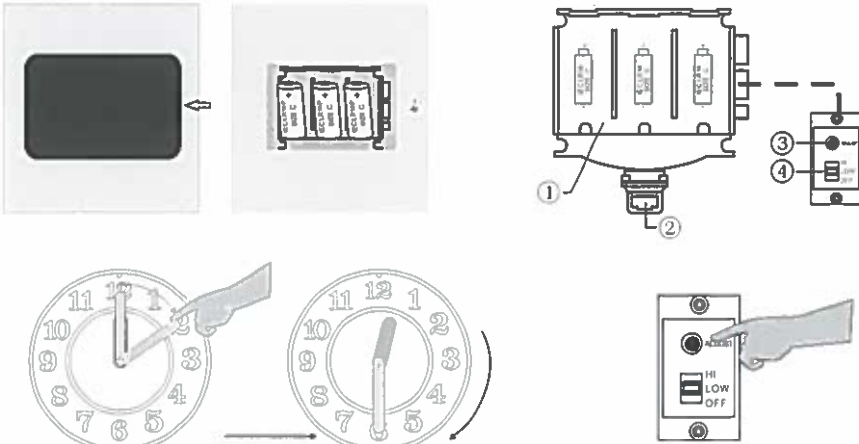

- ① BATTERY COMPARTMENT
- ② PENDULUM HOLDER
- ③ CUCKOO ADJUST
- ④ VOLUME CONTROL S/W



Note: This product contains function of light control sensor. The sensor will automatically shut off cuckoo melodies in the darkness.