


INSTRUCTION

A. TO SET TIME

1. Put 1 X AA with polarity as indicated into battery room, see figure A-1.
2. Turn the hour/minute adjuster in clockwise

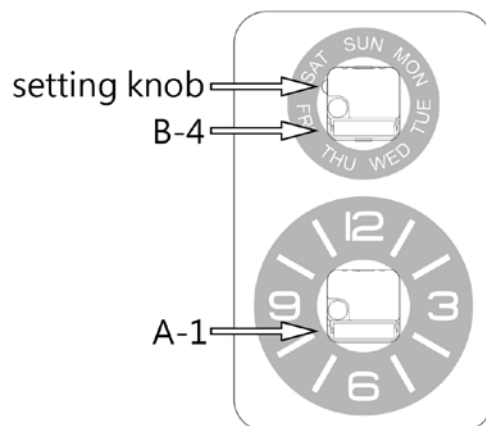


B. TO SET DAY

1. A week card (divides the dial with 168 intervals, each interval represents an hour) to be put in front of the clock face on the right position, see figure B-2.
2. Adjust the accurate day by turning white setting knob on the clock movement to the present time clockwise. e.g.: If its 20:00 on Sunday, see figure B-3.
4. Insert 1 X AA battery , see figure B-4.
5. Take away the week card carefully without touching the hand



B-2

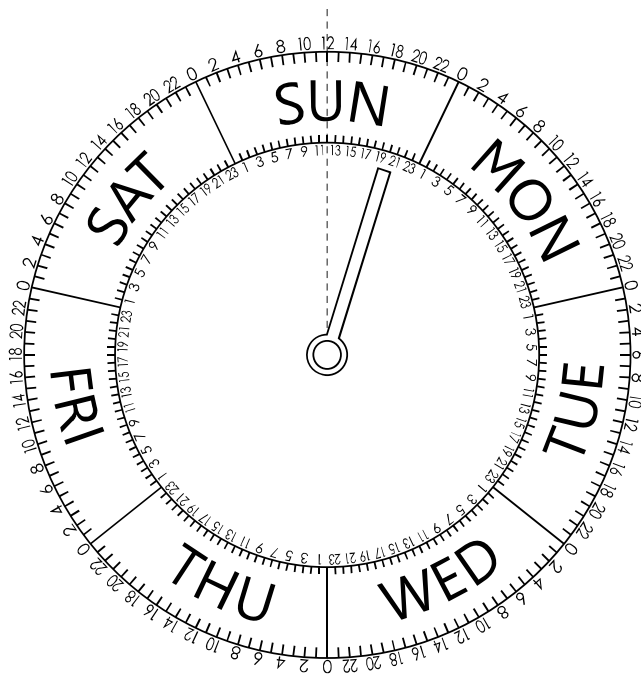

B-3

NOTE

- If the time keeping suddenly fluctuate replace the battery.
If the clock is not in use remove the battery.

Please retain this information leaflet & week card for future reference.