

Item Code: 55311


DECO OBJECT TELESCOPE SILVER CLOCK 49CM

KARE
DESIGN

ASSEMBLY INSTRUCTION




BATTERY INSTRUCTION

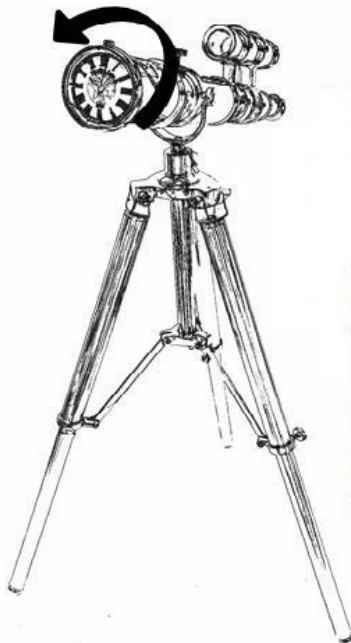

Die vordere Rohrleitung ist beweglich und muss justiert werden, damit die Uhr gerade steht

Zum Einlegen/Ersetzen der Batterie öffnen Sie das vordere Gehäuse wie im obigen Bild gezeigt durch Drehen gegen den Uhrzeigersinn. Funktioniert mit "Knopfzelle LR626" (nicht beiliegend) und wird mit der positiven (+ve) Seite nach oben eingelegt. Um die Zeit einzustellen, ziehen Sie den oberen Schlüssel (vorderes Gehäuse) hoch und drehen Sie ihn im Uhrzeigersinn. Ziehen Sie den Schlüssel nie mit zu viel Druck hoch, da er sonst brechen könnte.

The front pipe is movable which needs to be adjusted to keep clock straight

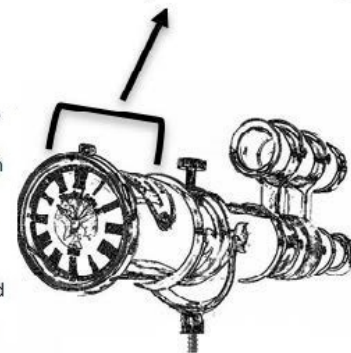

To put/replace battery, open the front case as shown in the above picture by rotating anti-clockwise
Works with "Button Cell LR626" (not enclosed) and placed with positive (+ve) side facing upwards.
To set time, pull up the top key (front case) and wind in clockwise direction.
Never pull up the key with too much pressure as it might break.