


KARE

DESIGN

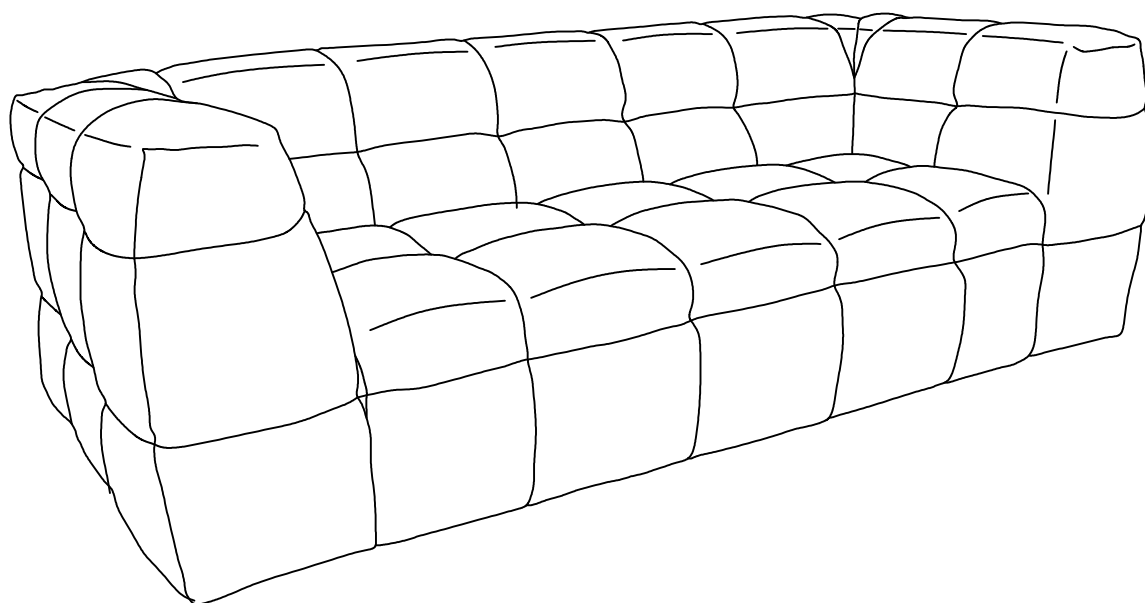

29974

(99mic Michelin left)

29922


(99mic Michelin right)

29975

(Michelin left 3E+H)

29925


(Michelin right 3E+H)

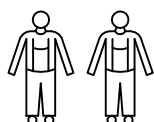


This action is exactly the same for every module

"Step 1"


"ARM-G-H-ARM"

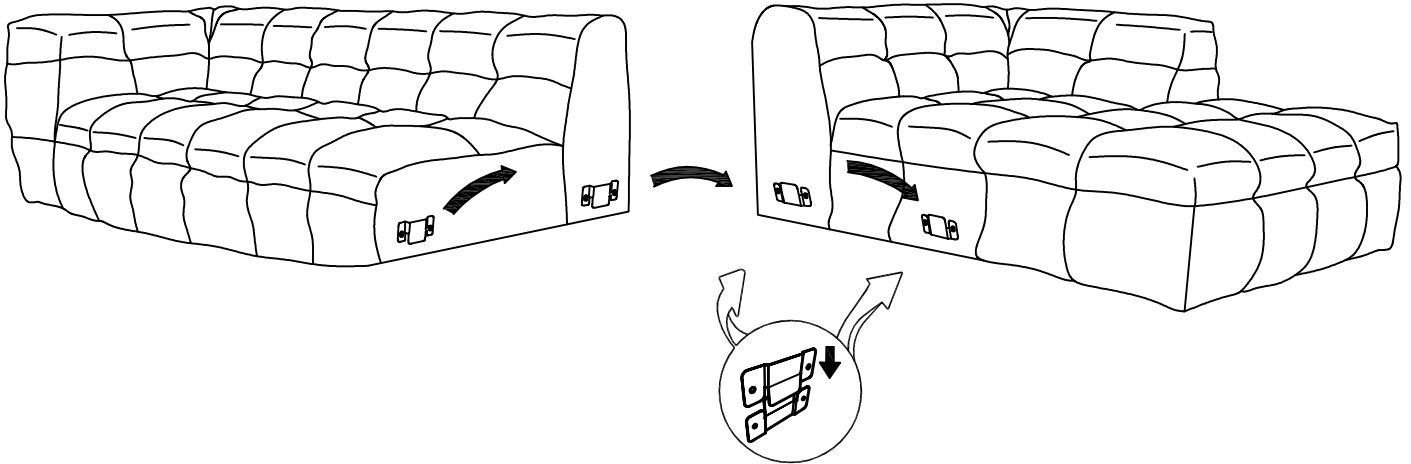

"Step 2"

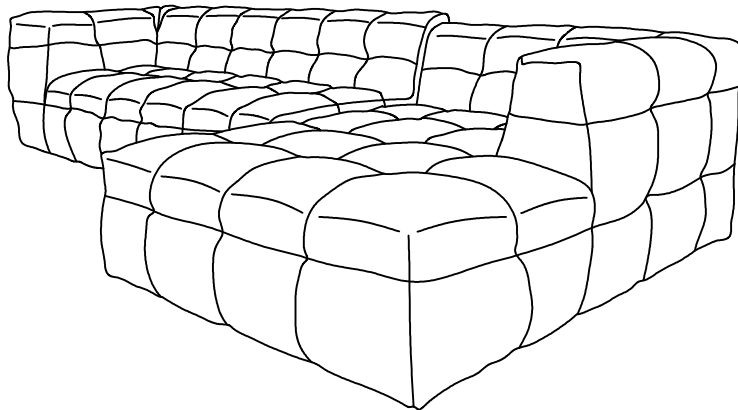


"Step 3"

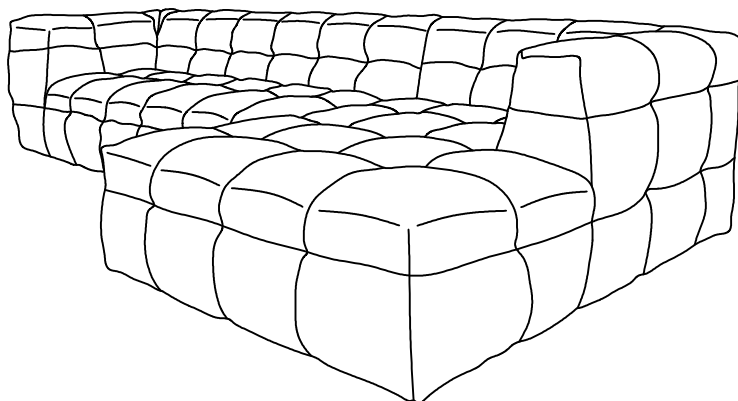


"Step 1"

"ARM-E3-H-ARM"

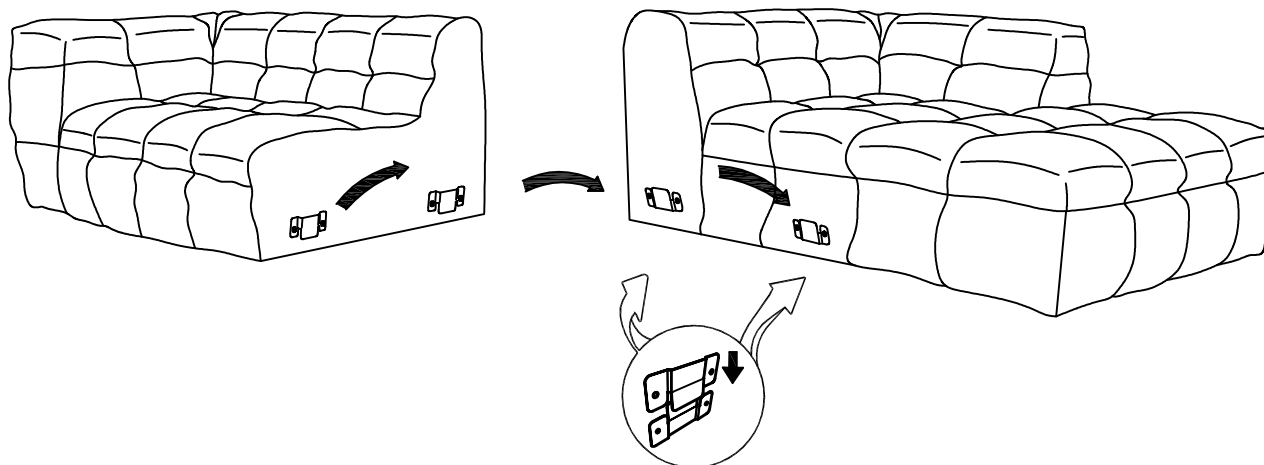

"Step 2"

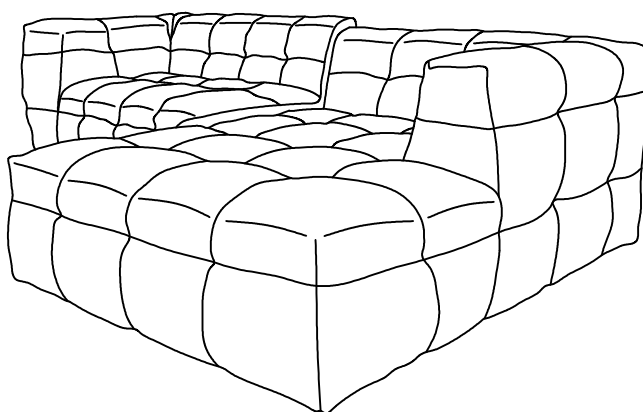

"Step 3"

