



# 70052 Sideboard Divine 180x76.5cm

**KARE**  
DESIGN

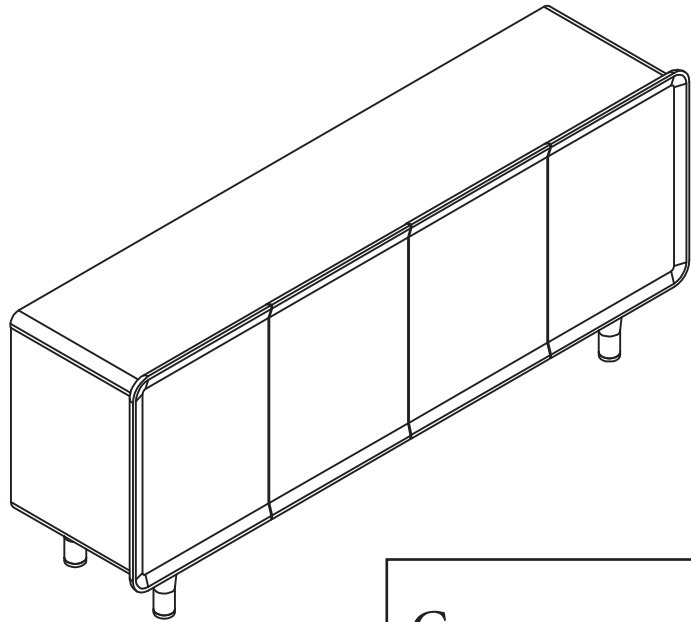


<p>A</p>	<p>B</p> <p>4pcs</p>
<p>C</p> <p>4pcs</p>	<p>D</p> <p>NOT INCLUDED</p> <p>4pcs</p>
<p>F</p> <p>M8x50</p> <p>4pcs</p>	<p>E</p> <p>NOT INCLUDED</p> <p>3.5x30</p> <p>4pcs</p>
<p>G</p> <p>2pcs</p>	<p>H</p> <p>φ 5</p> <p>16pcs</p>

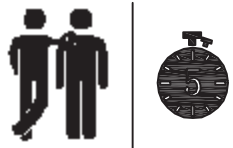


# 70052 Sideboard Divine 180x76.5cm

**KARE**  
DESIGN

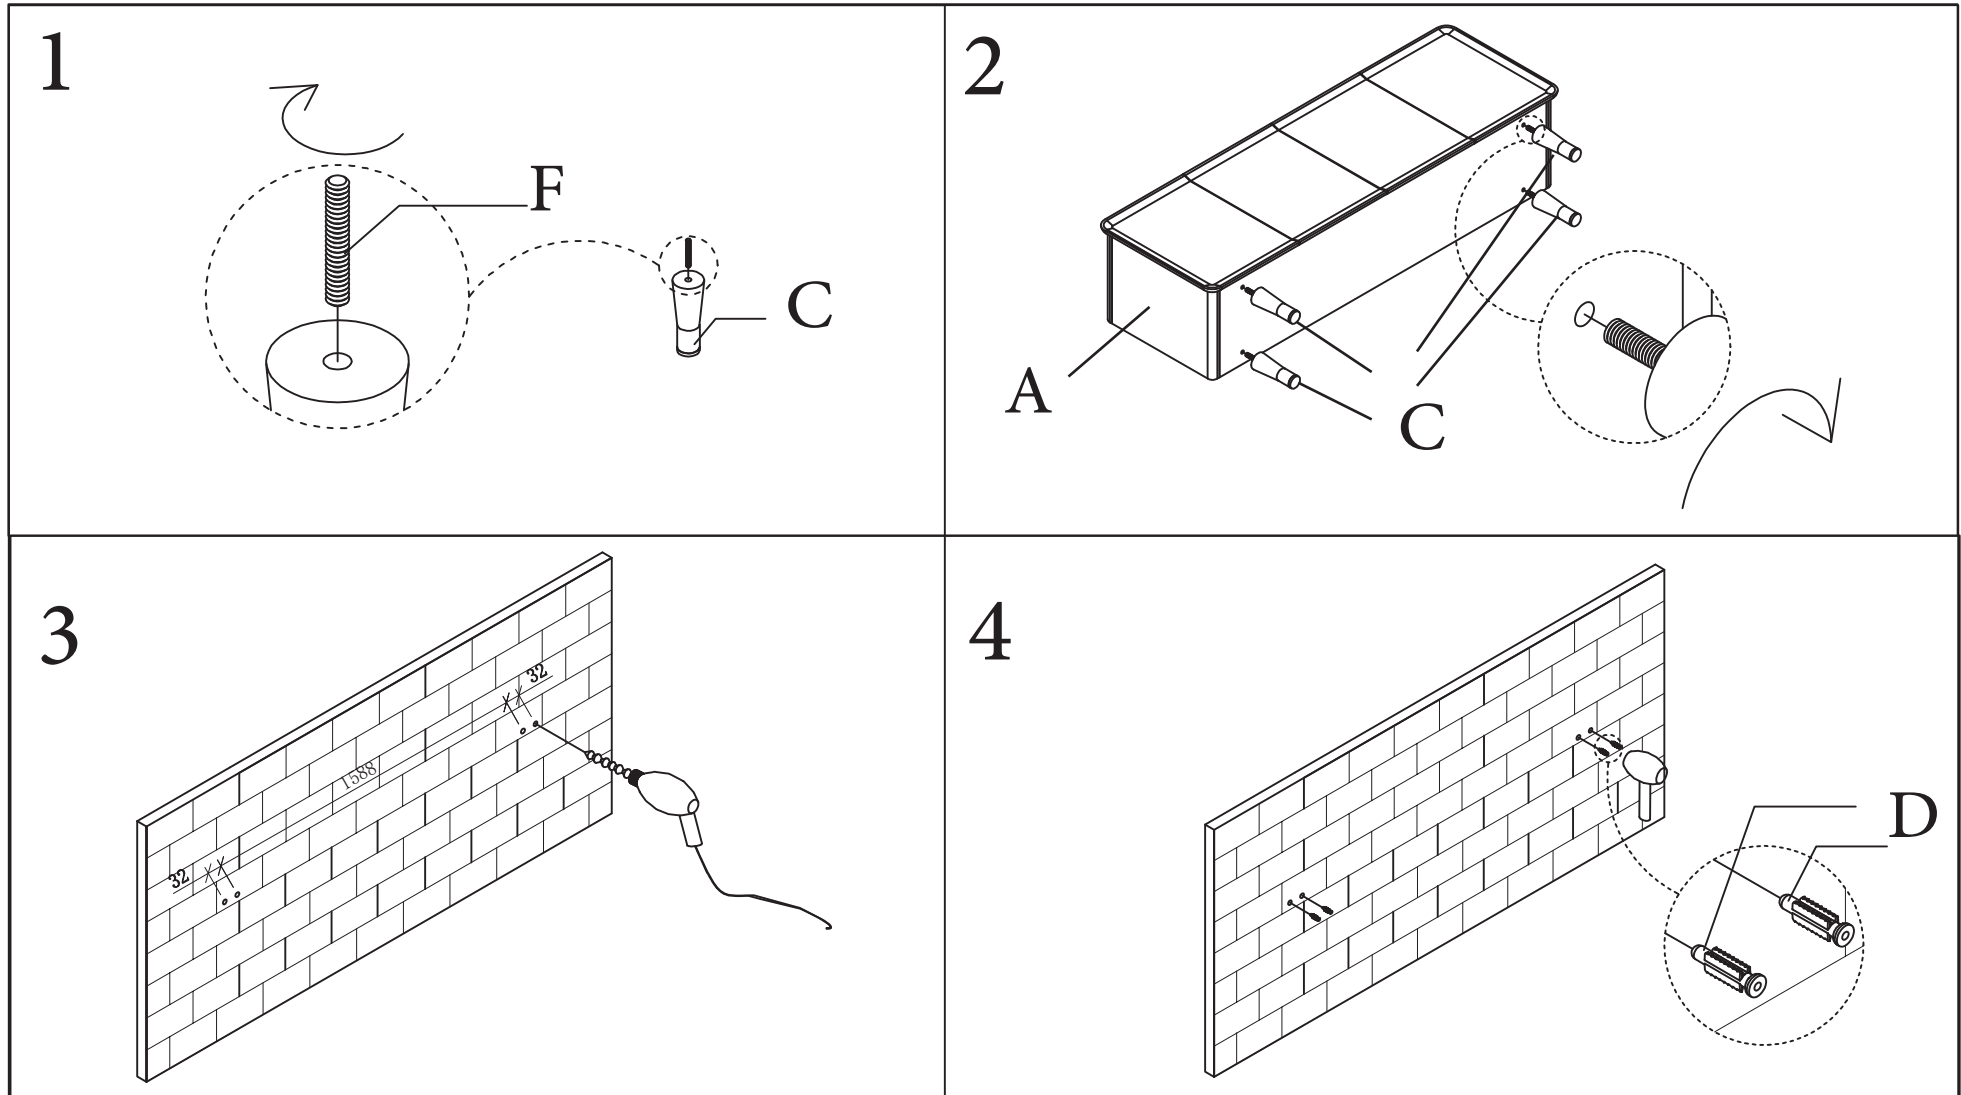


70052 Sideboard Divine 180x76.5cm

5

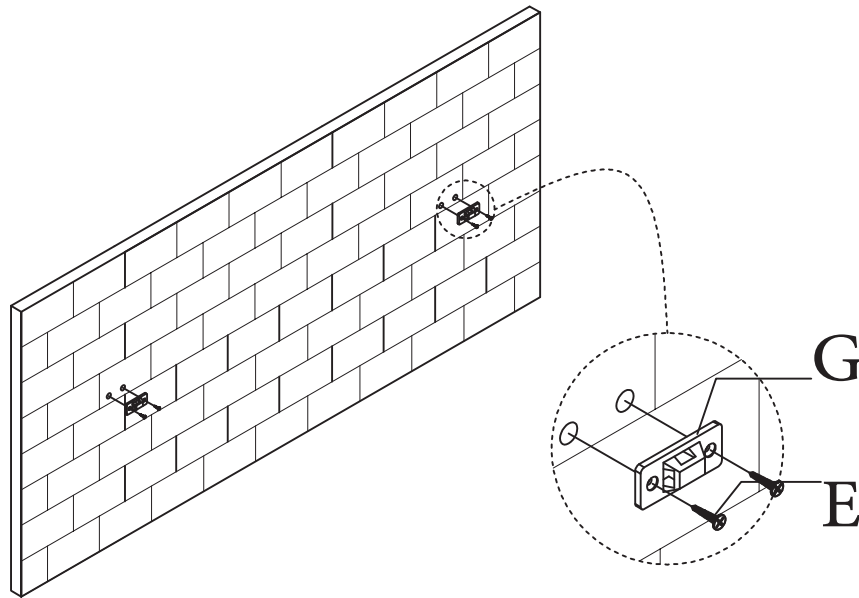


6

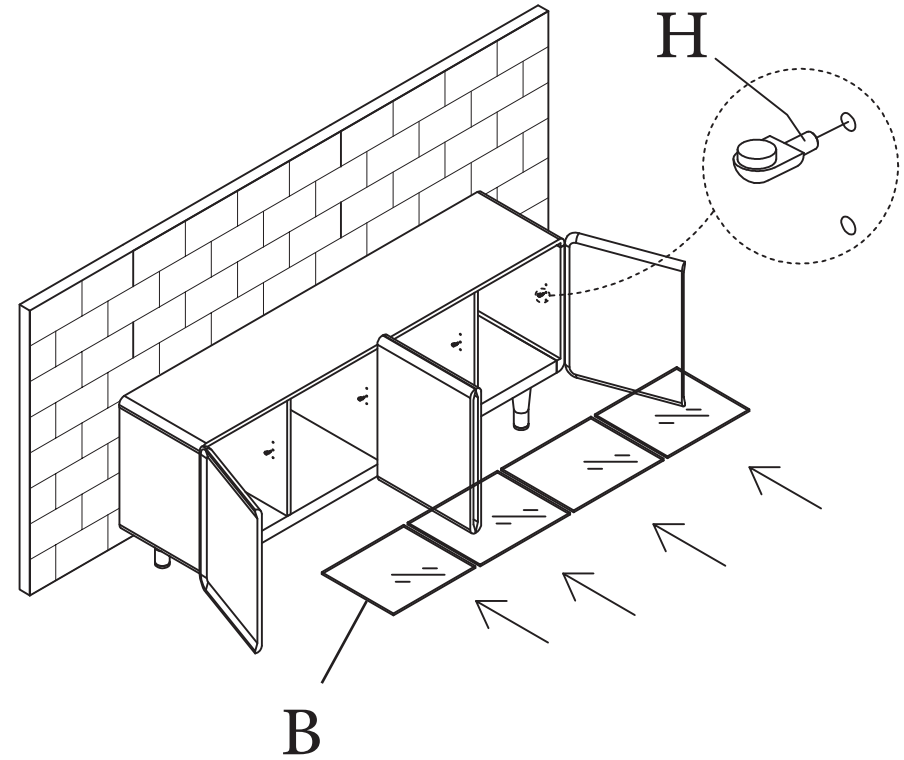


# 70052 Sideboard Divine 180x76.5cm

**KARE**  
DESIGN

7

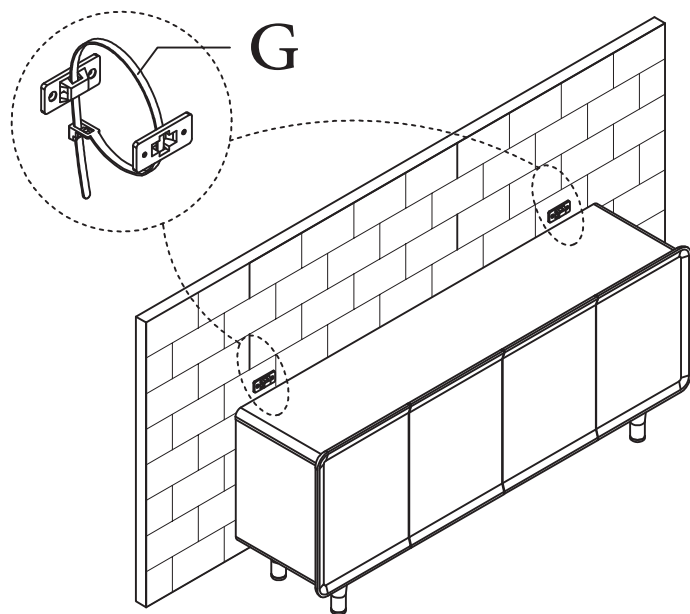

8

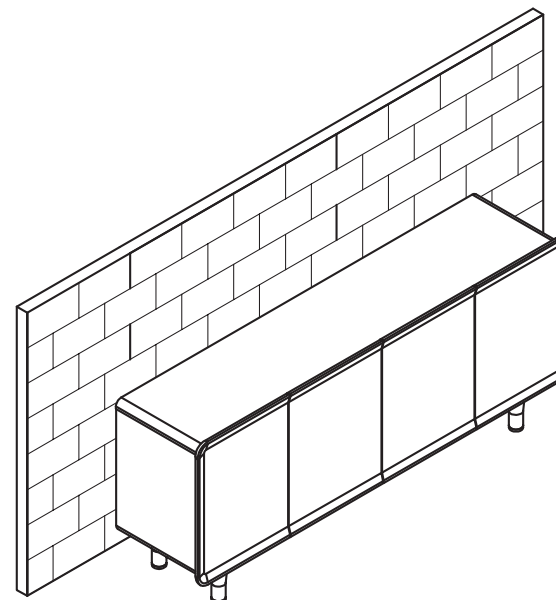

### Anti-Tip Kit

It is essential to use wall anchors appropriate for your wall type (i.e. plaster, drywall, concrete, etc.), along with appropriate screws, for proper mounting.

Consult a qualified professional or your local hardware store for appropriate mounting hardware suited for your specific wall medium.