



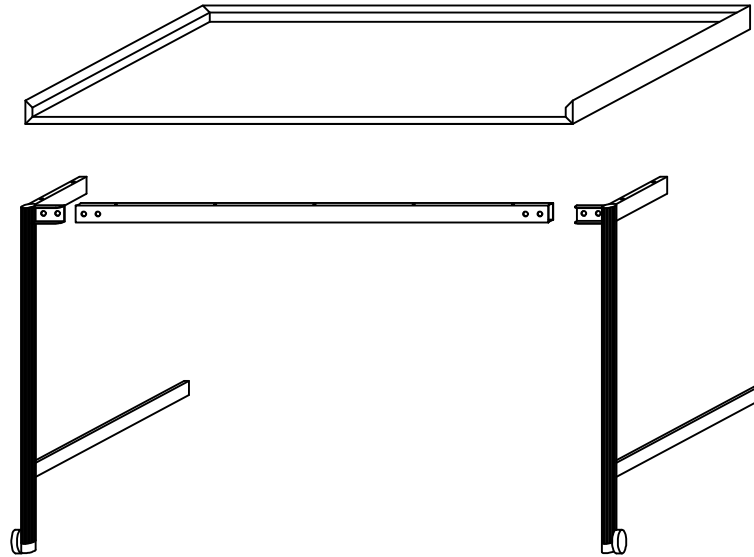

Step 1.

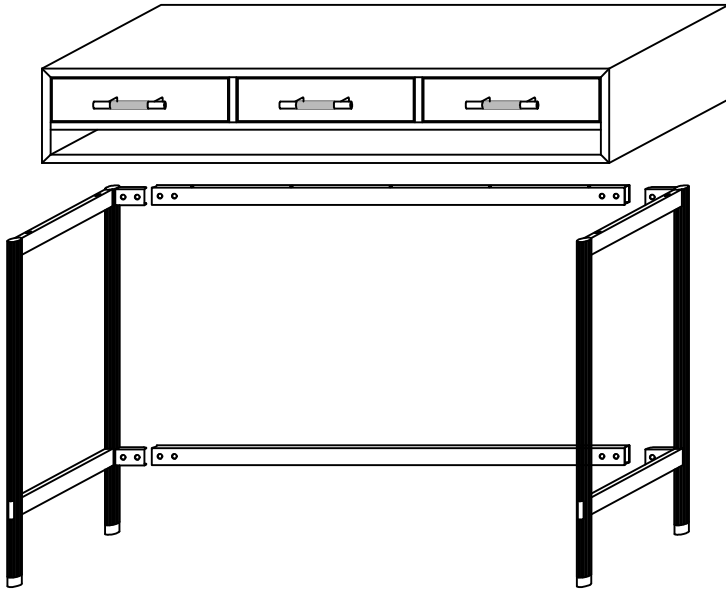


A 
M8*19MM
16pcs


B 
M8*12MM
16pcs

C 
M8*16MM
12pcs


D 
M5
1pcs

E 
M8*50MM
4pcs


F 
4*48MM
14pcs

G 
5*150MM
1pcs

Step 2.

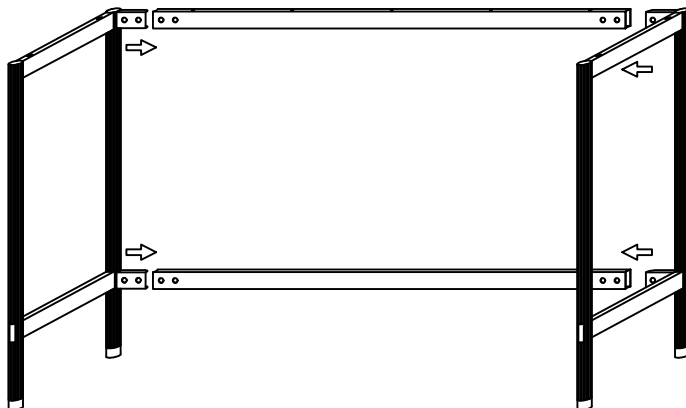


Step 3.

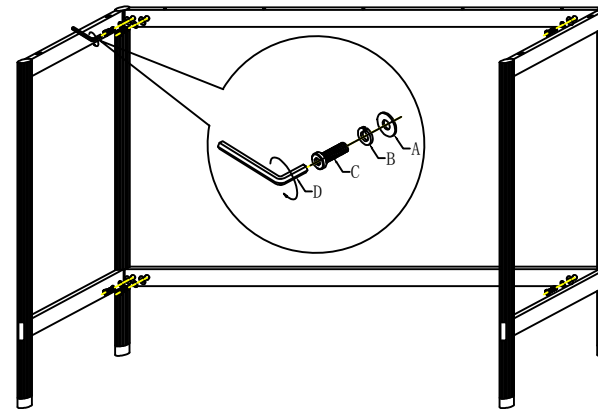





Step 4.

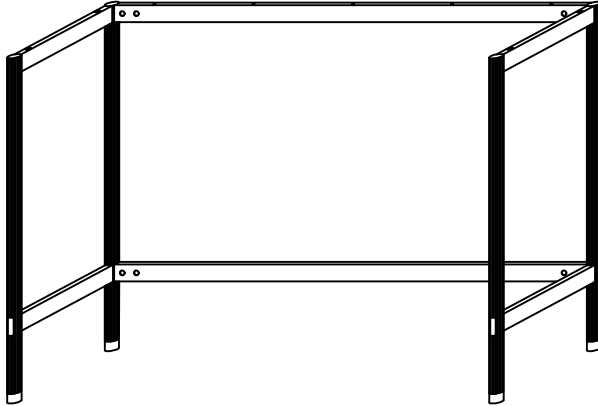


Step 5.

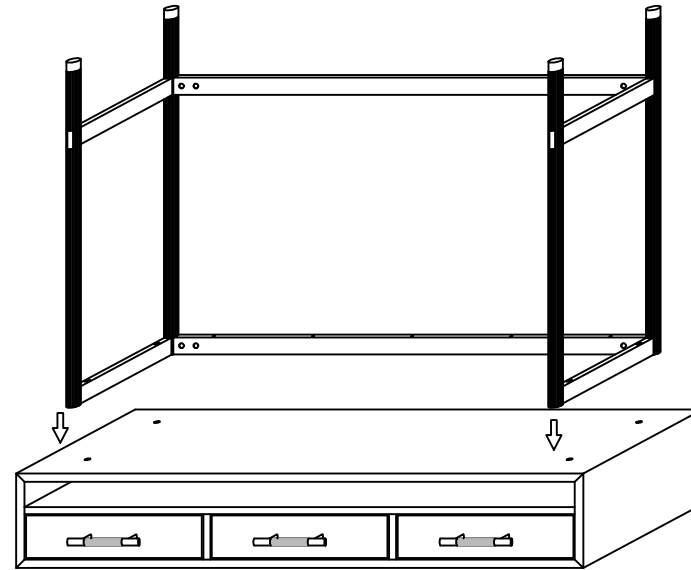

Step 6.

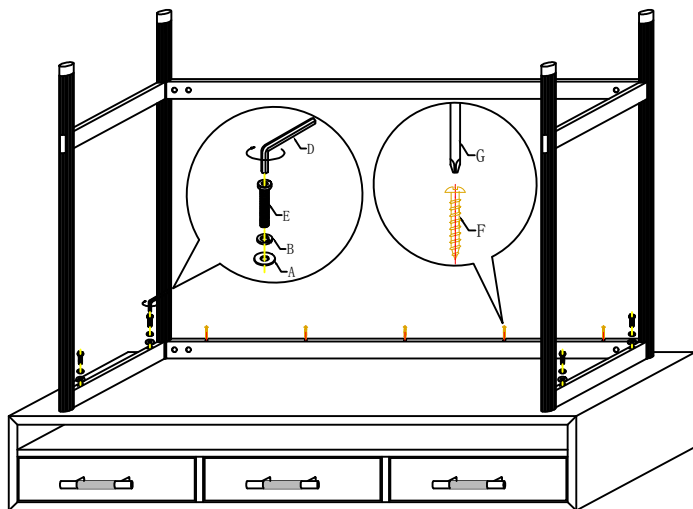



Step 7.

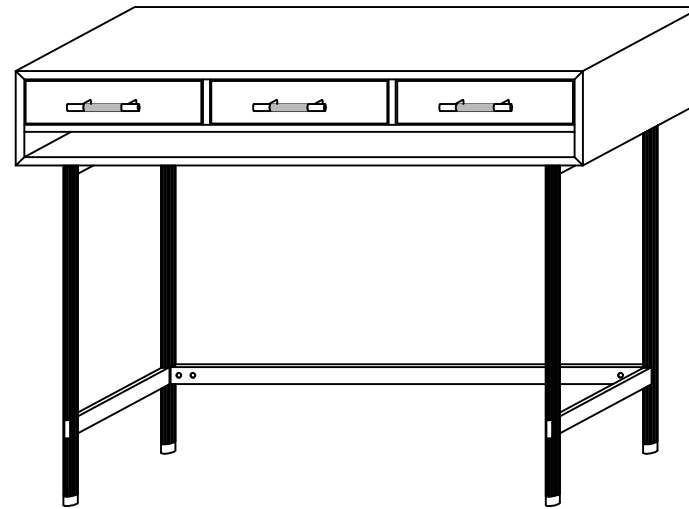


A 
M8*19MM
16pcs


B 
M8*12MM
16pcs

C 
M8*16MM
12pcs

D 
M5
1pcs


E 
M8*50MM
4pcs

F 
4*48MM
14pcs


G 
5*150MM
1pcs




Step 8.

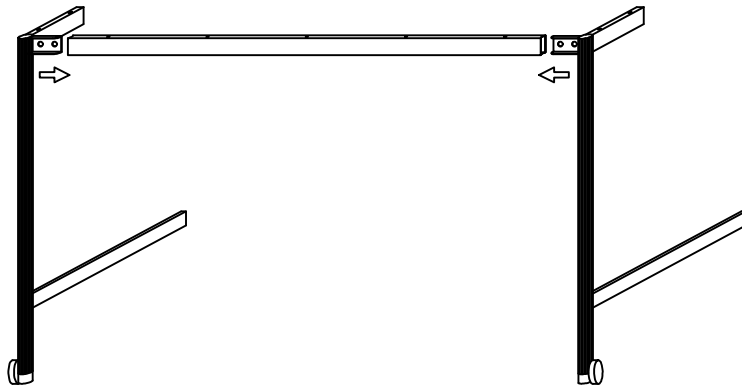


Step 9.

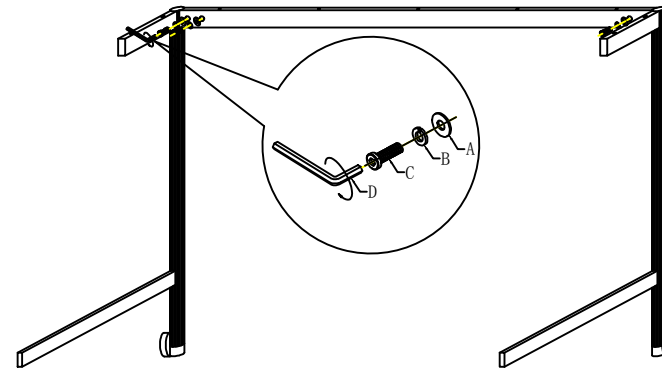

Step 10.

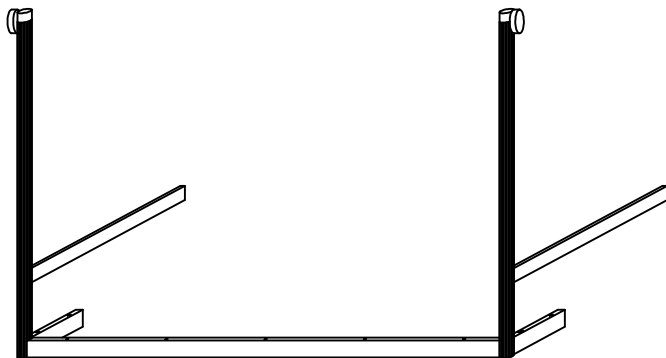


Step 11.

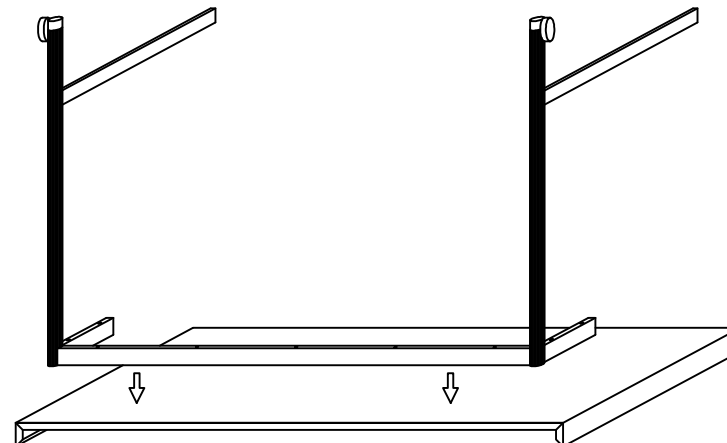


A 
M8*19MM
16pcs


B 
M8*12MM
16pcs

C 
M8*16MM
12pcs

D 
M5
1pcs


E 
M8*50MM
4pcs

F 
4*48MM
14pcs


G 
5*150MM
1pcs




Step 12.

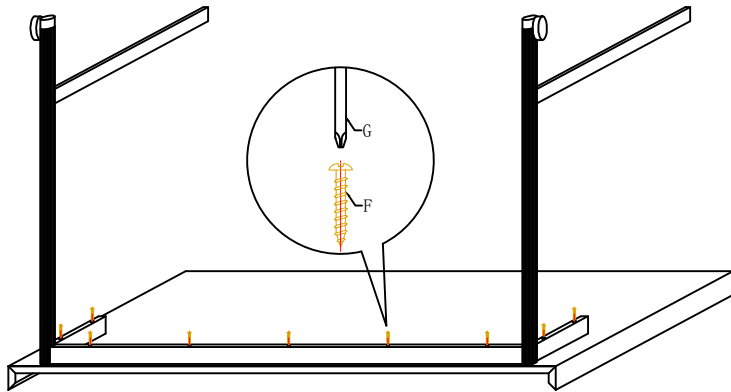


Step 13.

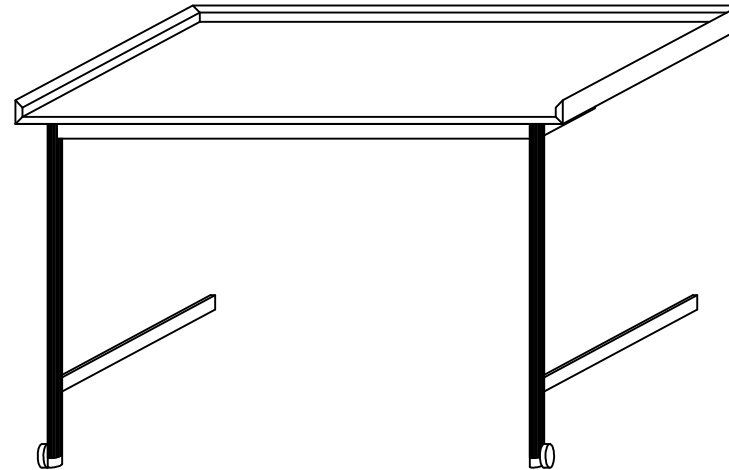

Step 14.

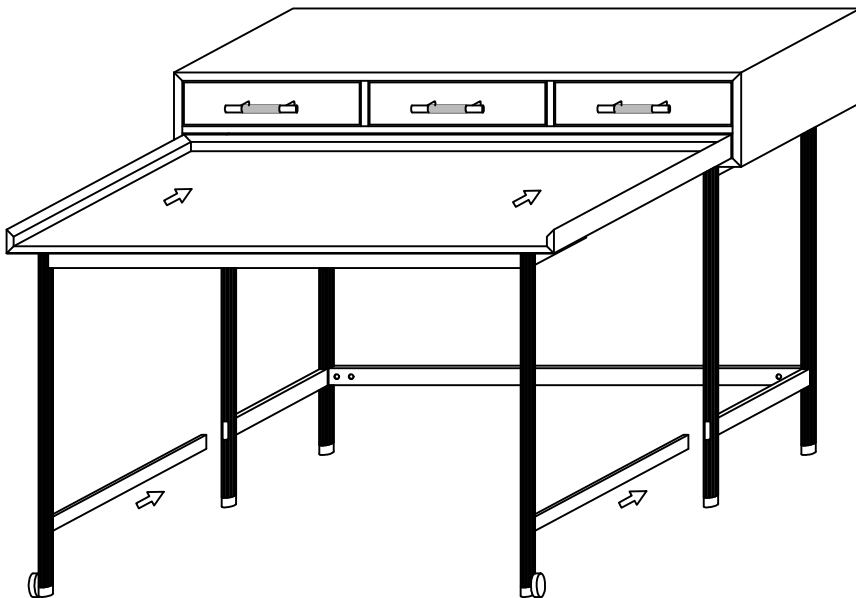



Step 15.

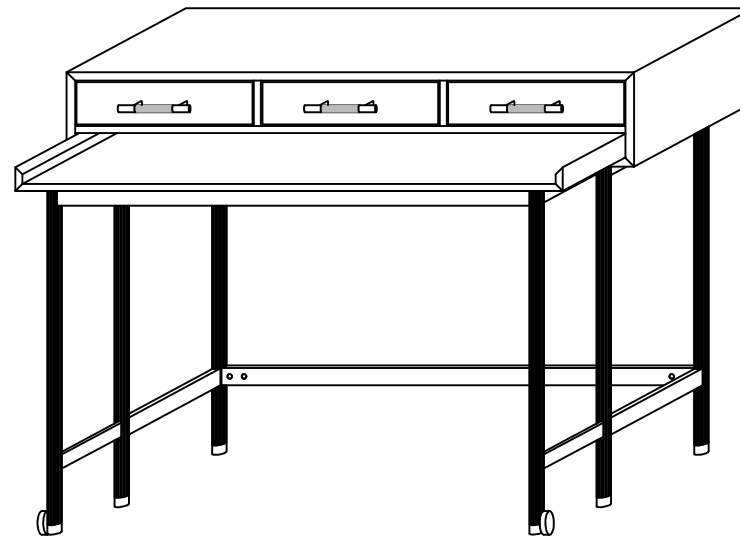


A 
M8*19MM
16pcs


B 
M8*12MM
16pcs

C 
M8*16MM
12pcs

D 
M5
1pcs

E 
M8*50MM
4pcs

F 
4*48MM
14pcs

G 
5*150MM
1pcs