



x2




10Min

85538 Corner Sofa Amalfi Right Creme

KARE DESIGN

A x8



B x24



C x24



Ø8x25MM


D x2



E x1




F x1




Step 1

Take out legs from the bottom of sofa body

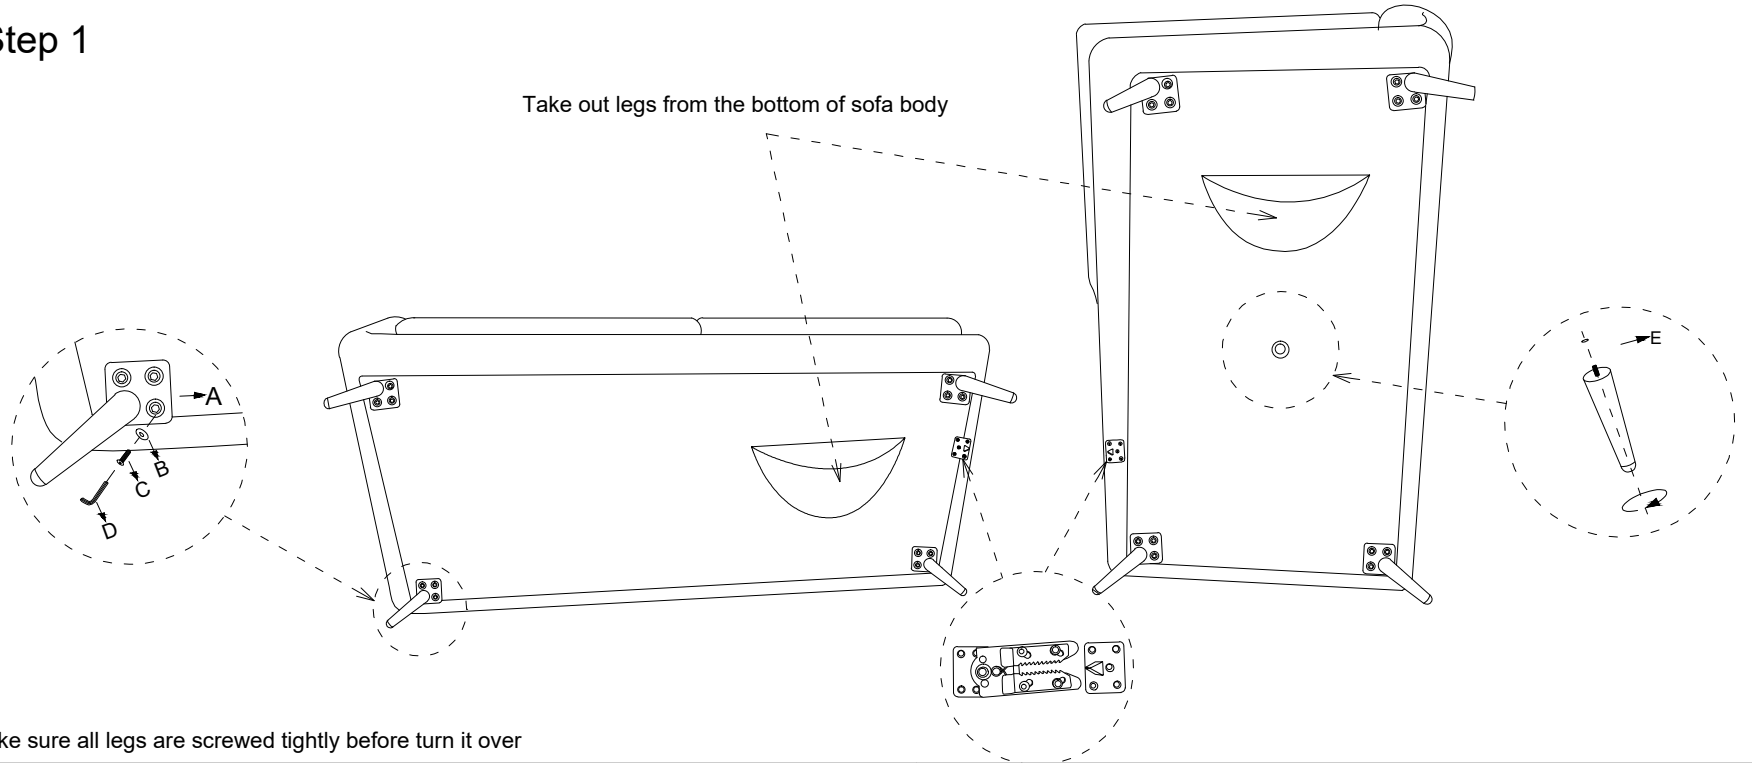

Make sure all legs are screwed tightly before turn it over

Step 2

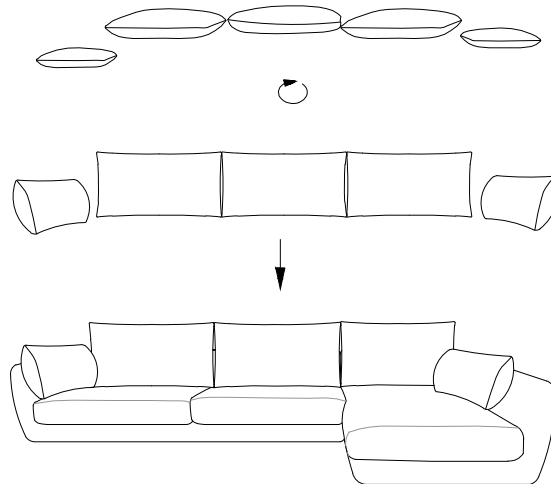

Put the back cushions in place

Step 3

