


85537 Corner Sofa Lucas Right Olive

KARE DESIGN

A_{x8}



B_{x24}



C_{x24}



Ø8x25MM

D_{x2}



E_{x6}




F_{x1}





Step 1

Take out legs from the bottom of sofa body

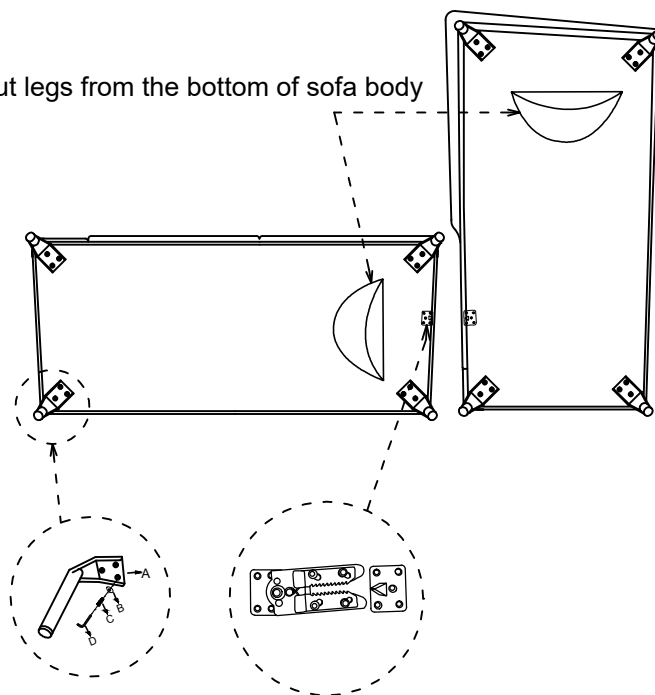


Make sure all legs are screwed tightly before turn it over

Step 2

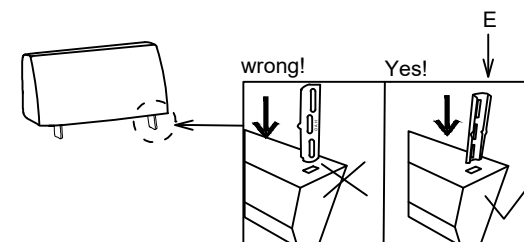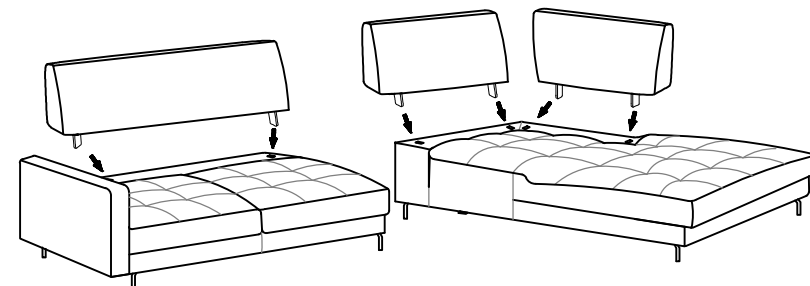

Insert the backrest in place

Step 3

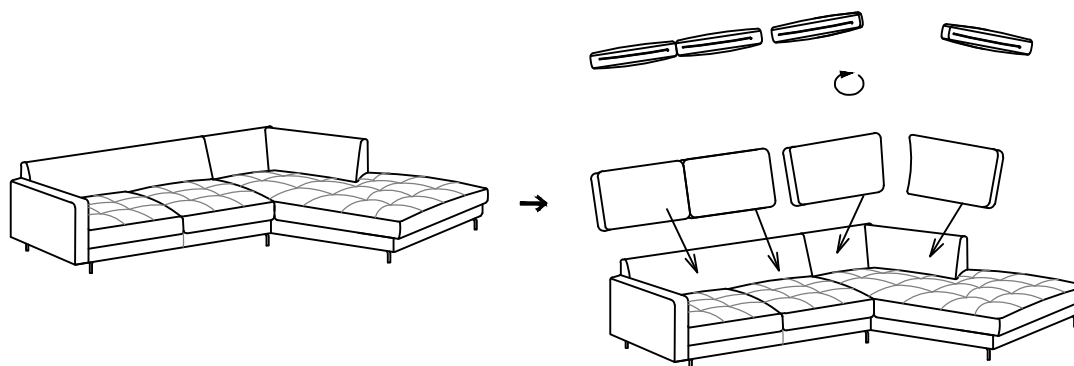

Put the back cushions in place

Step 4

