



x2




10Min


# 87684 Armchair Victor Beige

# KARE

DESIGN

**A**<sub>x2</sub>

H:17cm

**B**<sub>x2</sub>



H:17cm

**C**<sub>x1</sub>**D**<sub>x8</sub>**E**<sub>x8</sub>


M8\*30mm

**F**<sub>x1</sub>

## Step 1

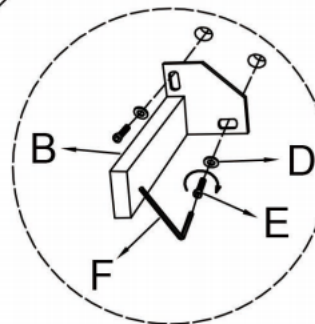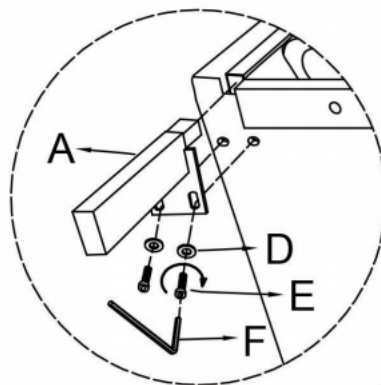


Take out legs from the bottom of sofa body

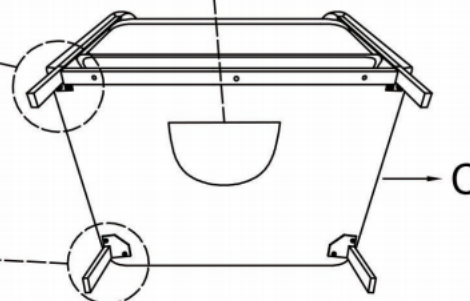

Make sure all legs are screwed tightly before turn it over

## Step 2

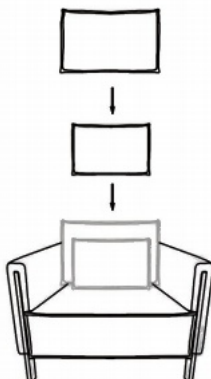

Put the back cushions in place

