
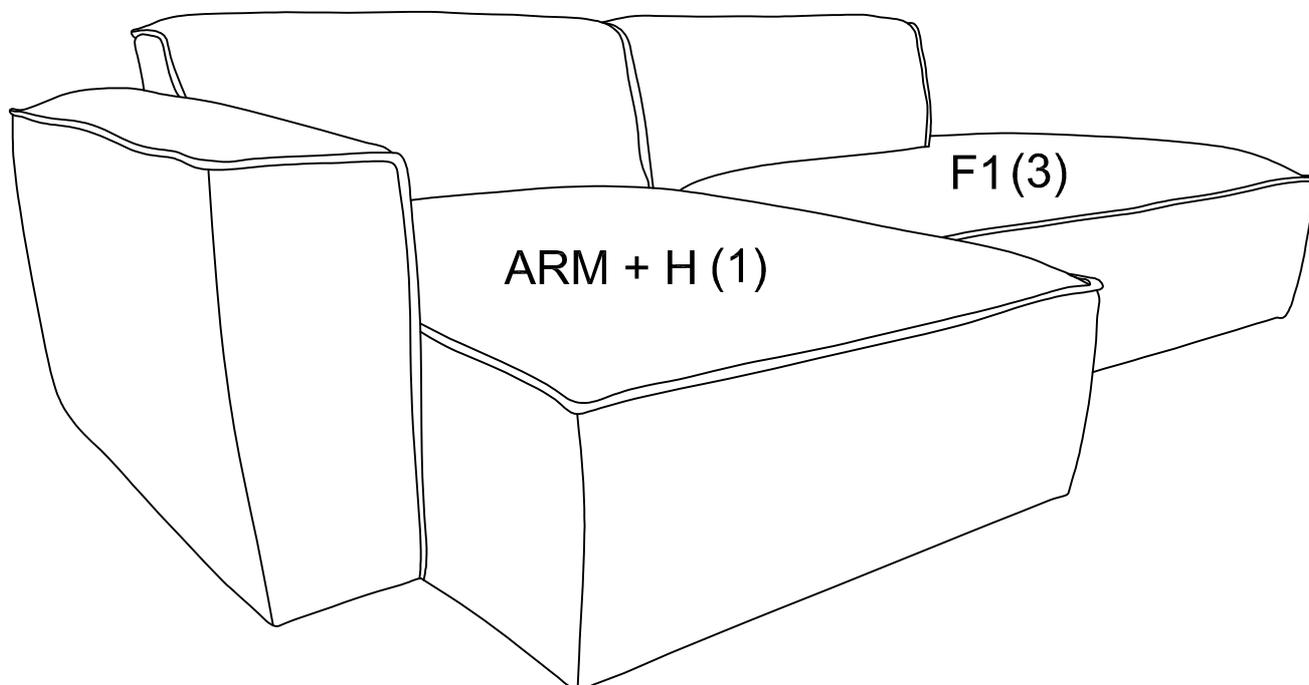
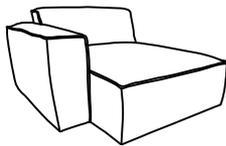
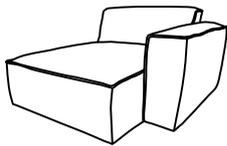
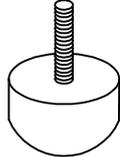



70639 Ecksofa Casanova Links 257cm

70640 Ecksofa Casanova Rechts 257cm


KARE
DESIGN



(1) x1  ARM + H	(2) x1  H + ARM	(3) x1  F1 (RIGHT)	(4) x1  F1 (LEFT)
(5) 2x9  height: 30mm	(6) 2x2  160 x 55 (mm)	(7) 2x2  43 x 55 (mm)	(8) 2x20  M3,5 x 20mm







Needed for assembly: **Screwdriver**

*Not included

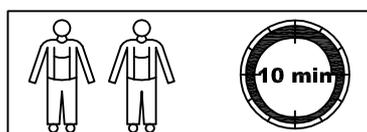

"ARM+H-F1(RIGHT)"


(70639)

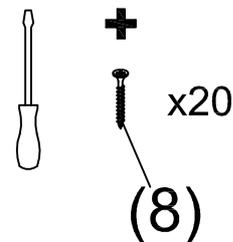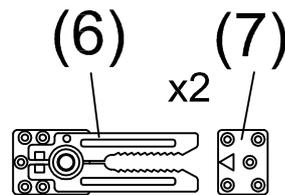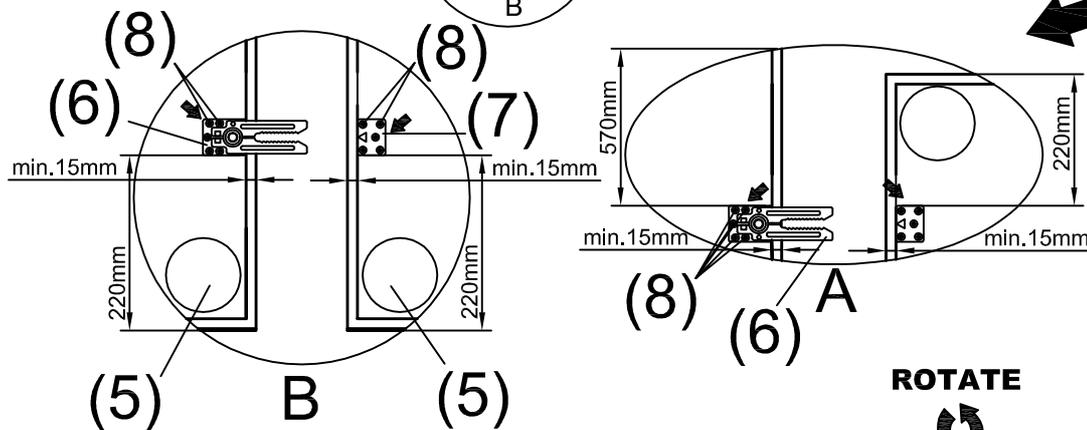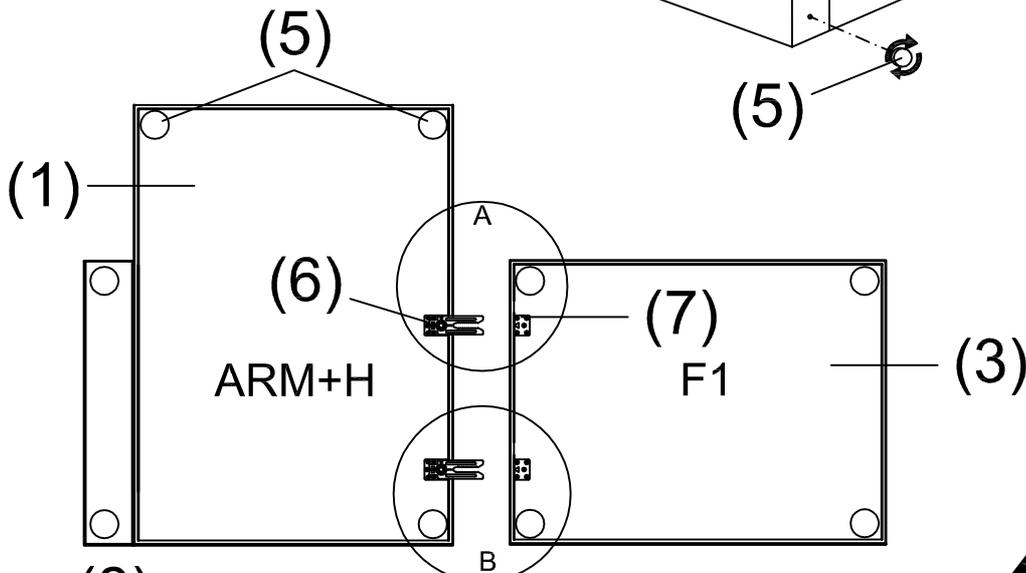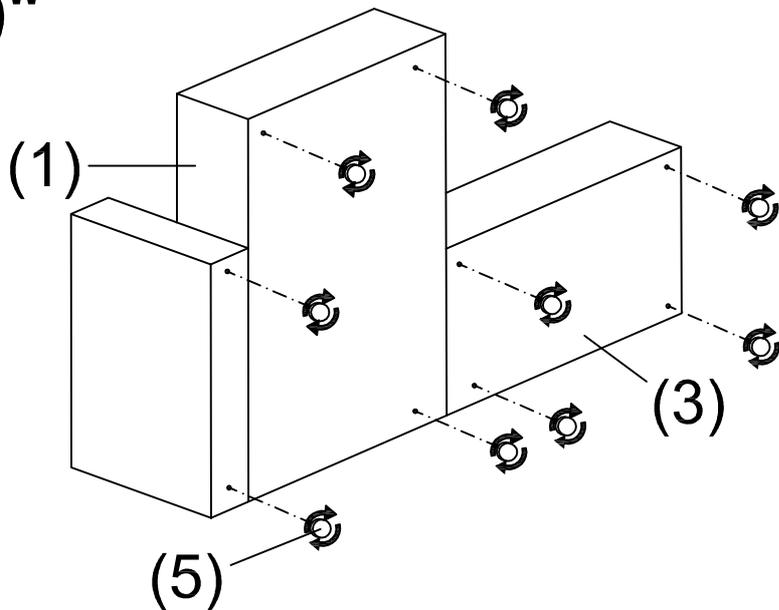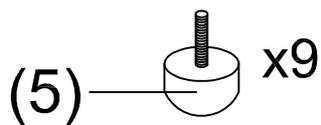

ROTATE



**Turn the modules and connect them together
By using at least two people.**

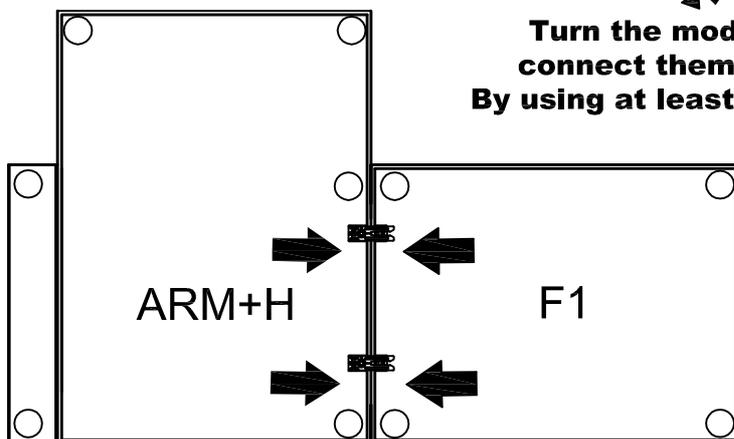

NOTE: "F1(LEFT)-G+ARM" (70640) is a mirrored version of "ARM+H-F1(RIGHT)" (70639)