

"MAX 40W FOR
INCANDESCENT
BULB"

**KARE
DESIGN**




To assemble lamp visit this QR code link
or go to http://youtu.be/U_Va-hYwUdo

34332 Pendant Shade Oriental Paper

ASSEMBLING INSTRUCTIONS


*Use only socket E14 and small bulb.

STEP 1

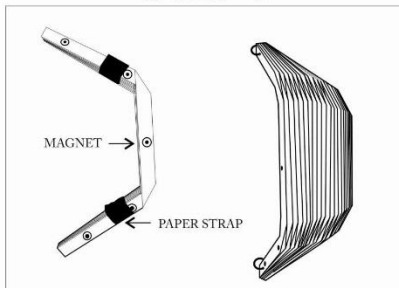


REMOVE THE PAPER STRAP
AND OPEN THE LAMP

STEP 2

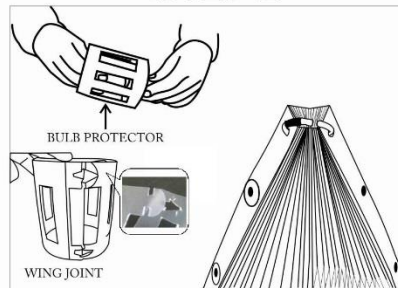

ADJUST THE BULB AND SOCKET ALONG WITH
ELECTRICAL WIRE IN THE BULB PROTECTOR

STEP 3

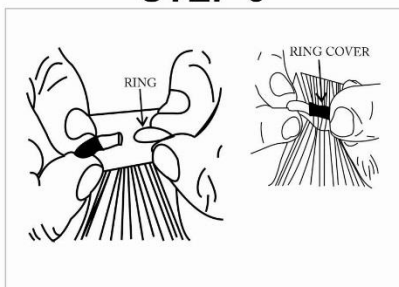


OPEN THE RING COVER TO PUT THE
ELECTRICAL WIRE IN THE CENTER.
CLOSE THE RING AFTER INSERTING
THE WIRE .

STEP 4



THE WIRE IS ADJUSTED ALONG WITH
THE PROTECTOR IN THE CENTER OF
THE LAMP.

STEP 5

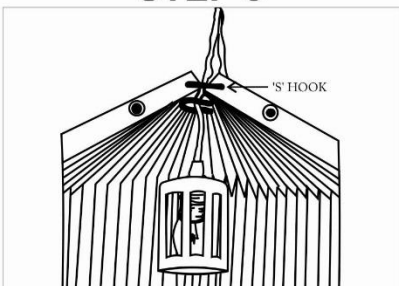

INSTALL THE HOOK "S" ON THE
ELECTRICAL WIRE TO ADJUST AND FIX
THE SOCKET IN THE CENTER OF
THE SHADE

STEP 6



CLOSE THE LAMP SHADE AND
IT'S READY TO GLOW

E.W.S