























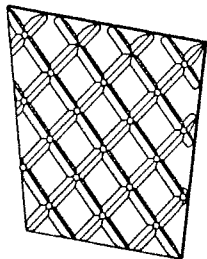

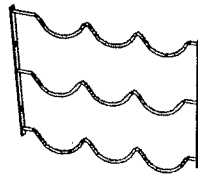



Do not tighten any screws until item is fully assembled

A		36PCS	B		36PCS
C		15PCS	D		16PCS
E		8PCS 1/4*1/2"	F		4PCS
G		6PCS 1/4*1-1/4"	H		1PC
I		6PCS	J		2PCS
K		1" 2PCS	L		5/8" 2PCS
M		4PCS	N		1PC
1		1PC	8		1PC
2		1PC	9		1PC
3		1PC	10		1PC
4		1PC	11		1PC
5		1PC	12		2PCS
6		1PC	13		2PCS
			14		2PCS
7		1PC			

# ASSEMBLY INSTRUCTION

Do not tighten any screws until item is fully assembled

<p>step1</p>	<p>step2</p>
<p>step3</p>	<p>step4</p>
<p>step5</p>	<p>step6</p>
<p>step7</p>	<p>step8</p>

# HIDDEN CONNECTOR ... ASSEMBLY TECHNIQUES.

1. SET INCLUDE: METAL DOWEL. . ROUND LOCKING DISK.

TOOL NEEDED: A CROSS HEAD SCREWDRIVER (NOT INCLUDED)


STEP 1. SCREW METAL DOWEL ONTO PRE-SET NUT ON PANEL.

ATTENTION: DO NOT OVER TIGHTEN THE METAL DOWEL.

STEP 2. ATTACH BOTH PANELS. MAKE SURE YOU HAVE INSERTED THE METAL DOWEL TO THE VERY DEPTH OF THE HOLE WITH RUBBER Mallet GENTLY.

CAUTION: DO NOT USE HAMMET. THEN INSERT ROUND LOCKING DISK INTO PRE-DRILLED HOLE ON PANEL. MAKE SURE THE ARROW SING "...>" ON DISK SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE METAL DOWEL HAS BEEN INSERTED AND INSERTED THE DISK TO THE VERY DEPTH OF THE HOLE.


STEP 3. TIGHTEN BY TURNING THE METAL LOCKING DISK CLOCK WISE WITH CROSS HEAD SCREWDRIVER.



METAL DOWEL




ROUND LOCKING DISK

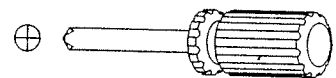


CROSS HEAD SCREWDRIVER


STEP 1

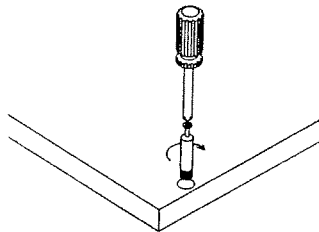

STEP 2

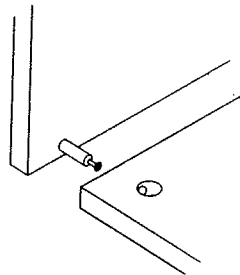

STEP 3

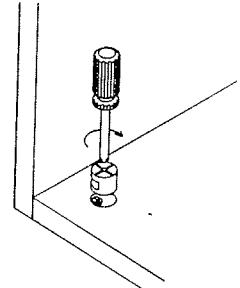

## WOOD DOWEL INSTALLATION PROCEDURE

SET INCLUDE: WOOD DOWEL. GLUE.

TOOL NEEDED: WITH RUBBER Mallet (NOT INCLUDED)

STEP 1. FILL HOLE A LITTLE GLUE.


STEP 2. GENTLY TAP DOWEL INTO HOLE

WITH RUBBER Mallet. DO NOT USE HAMMER.


STEP 3. WIPE AWAY EXCESS GLUE.



GLUE




WOOD DOWEL

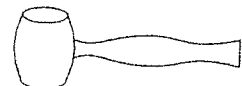


RUBBER Mallet

STEP 1

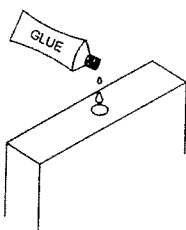

STEP 2

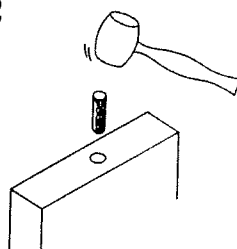

STEP 3

