



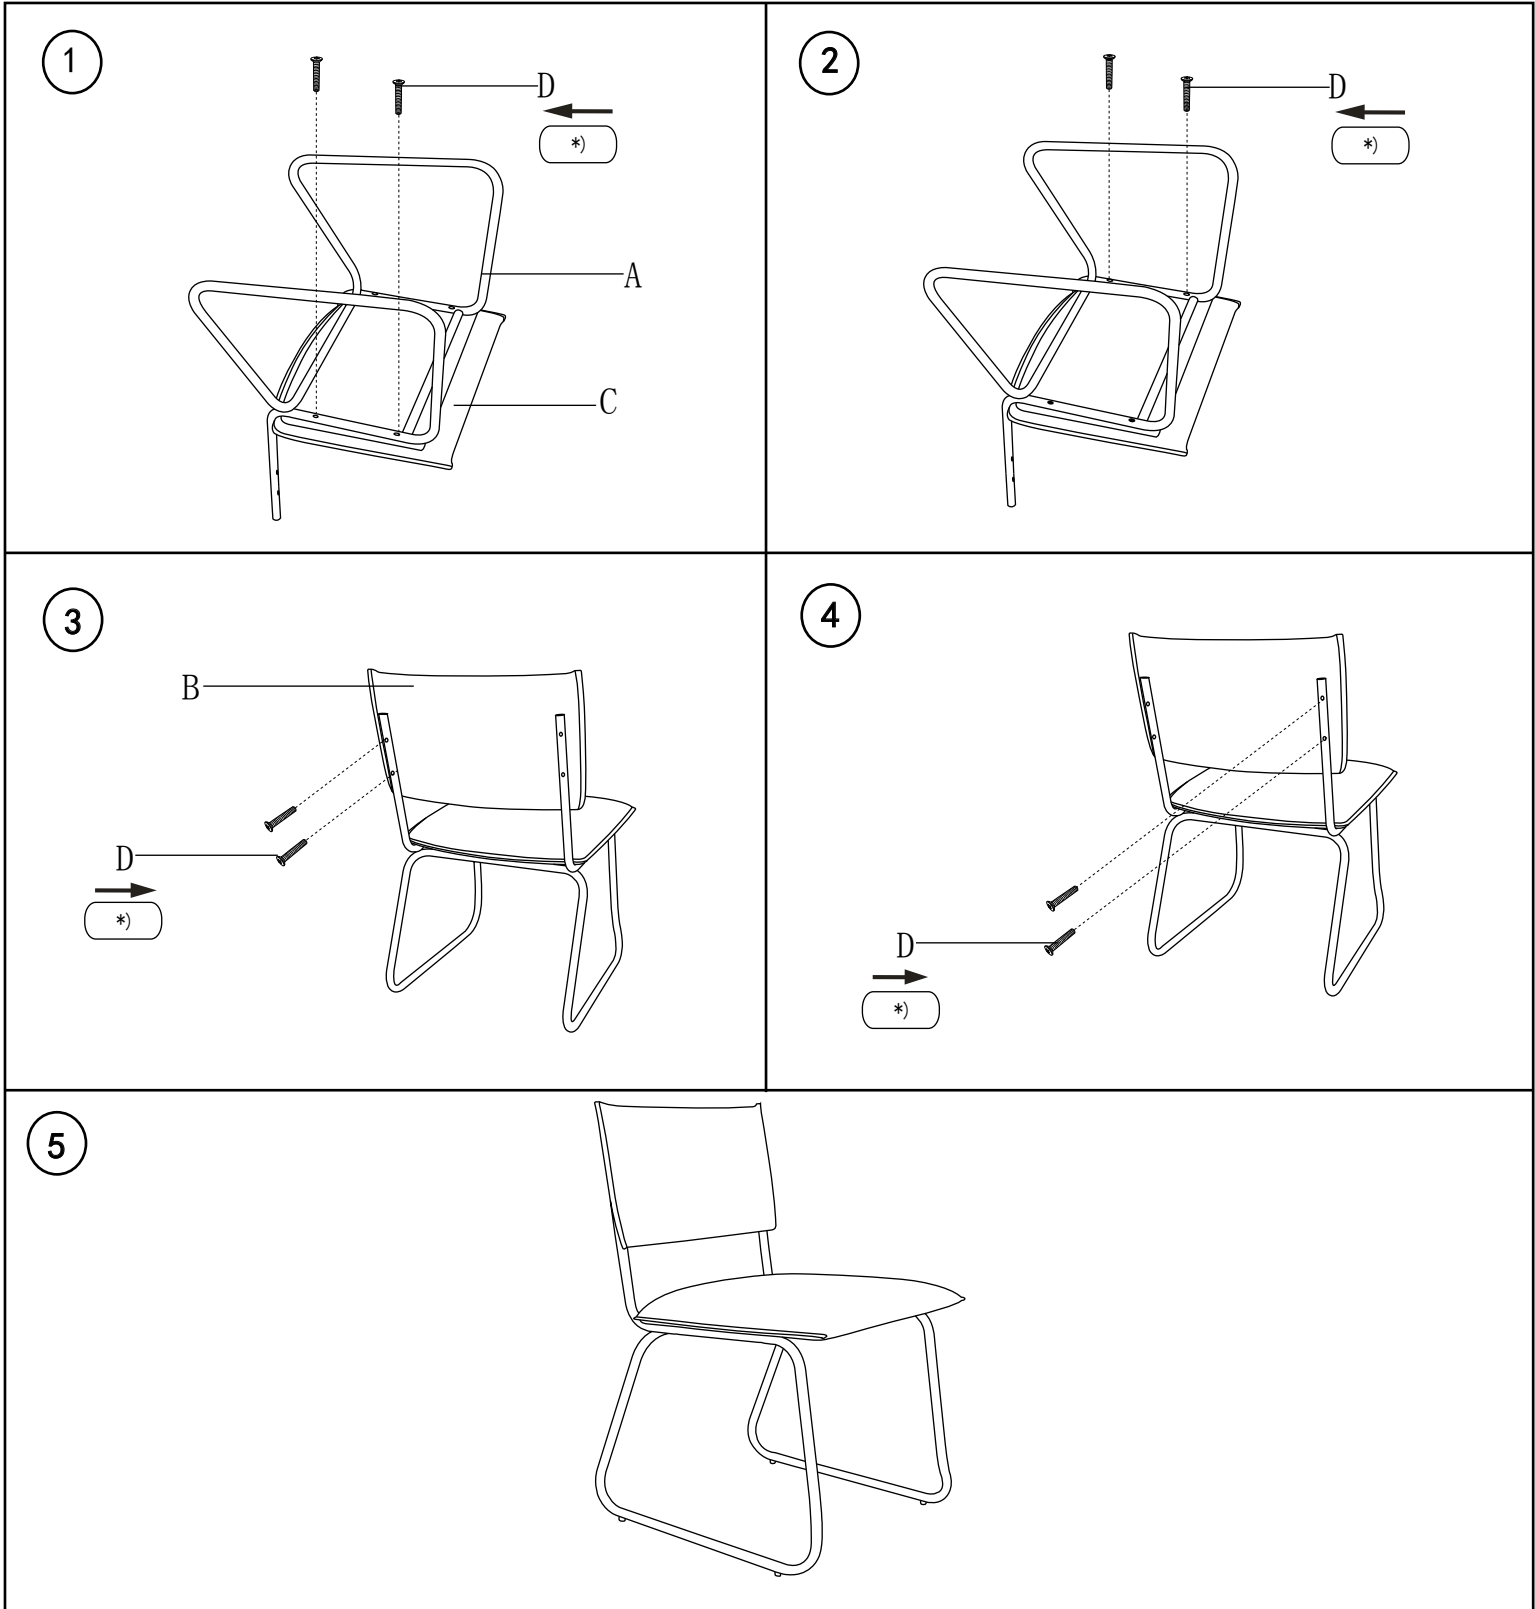


78203 – Stuhl Duran Vintage Black  
 78204 – Stuhl Duran Vintage Brown  
 79397 – Chair Duran Vintage Green

**KARE**  
 DESIGN

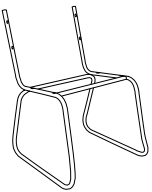

\*)  
 Fit the frame with the screw holes  
 Setzen Sie den Rahmen mit den Bohrungen  
 Ajuster le cadre avec des trous de vis  
 Montare il telaio con i fori delle viti  
 Positioneer frame met schroefgaten

<p><b>A*1</b></p> 	<p><b>B*1</b></p> 	<p><b>C*1</b></p> 	<p><b>D*8</b></p> 
---	---	---	---