





ASSEMBLY INSTRUCTION

FERRO ARMCHAIR

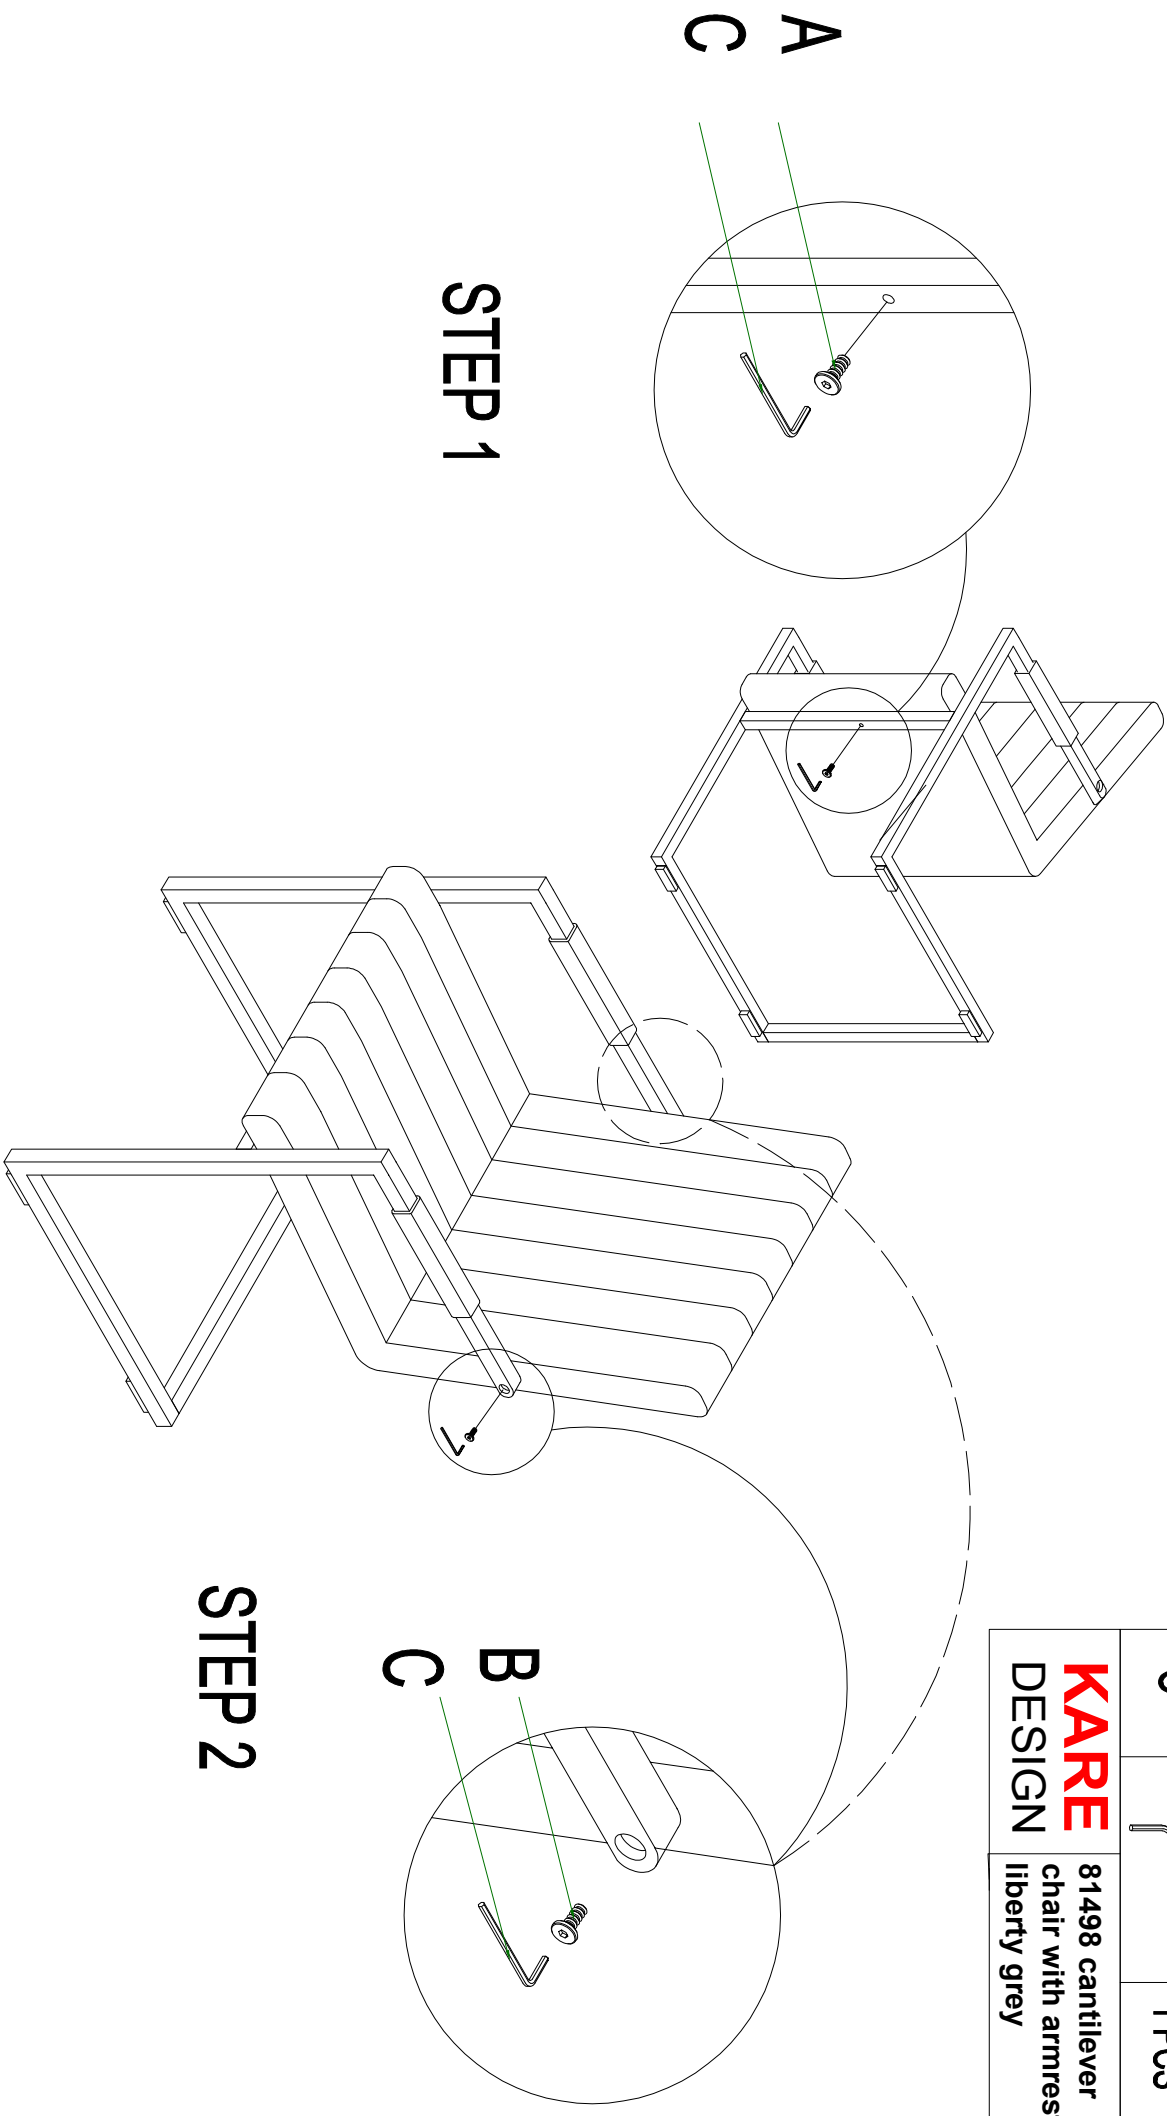

STEP 1

STEP 2

A	M 6x50		1 PCS
B	M 8x50		2 PCS
C			1 PCS
KARE DESIGN		81498 cantilever chair with armrest liberty grey	