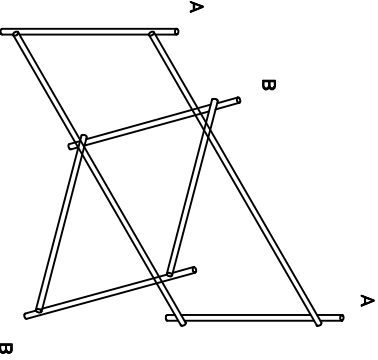
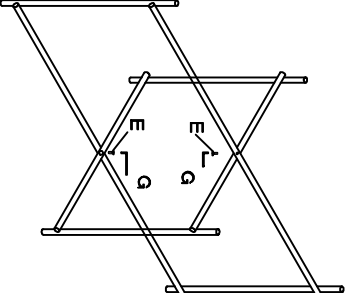
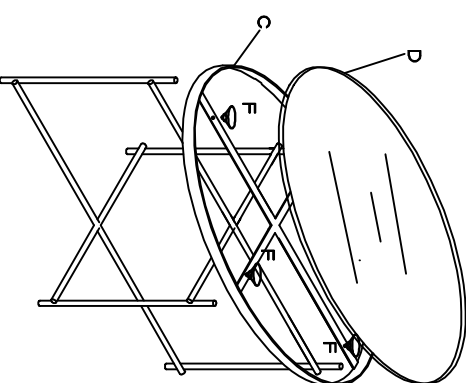
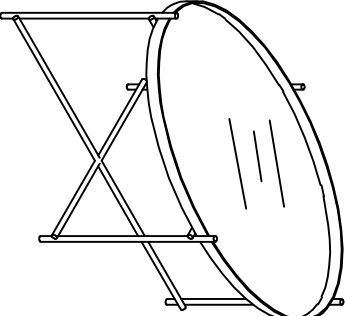
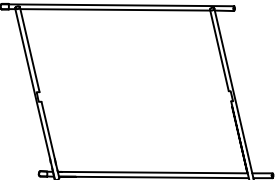








# KARRE

## 82739 82740 82741 Coffee Table

STEP 1	STEP 2	STEP 3	STEP 4			
 <p>A</p> <p>B</p>	 <p>E/g</p> <p>E/g</p>	 <p>c</p> <p>F</p> <p>F</p> <p>F</p>				
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 	<p>F</p> 	<p>G</p> 
<p>530*850*12</p> <p>1PC</p>	<p>530*450*12</p> <p>1PC</p>	<p>840*440*30</p> <p>1PC</p>	<p>840*440*5</p> <p>1PC</p>	<p>1/4*12.5</p> <p>2pcs</p>	<p>4PCS</p>	<p>1PC</p>

Remark: Do not tighten any screws until item is fully assembled!