


ASSEMBLY INSTRUCTION

ITEM NO. 87218 - Valet Stand Ordinato

KARE
DESIGN

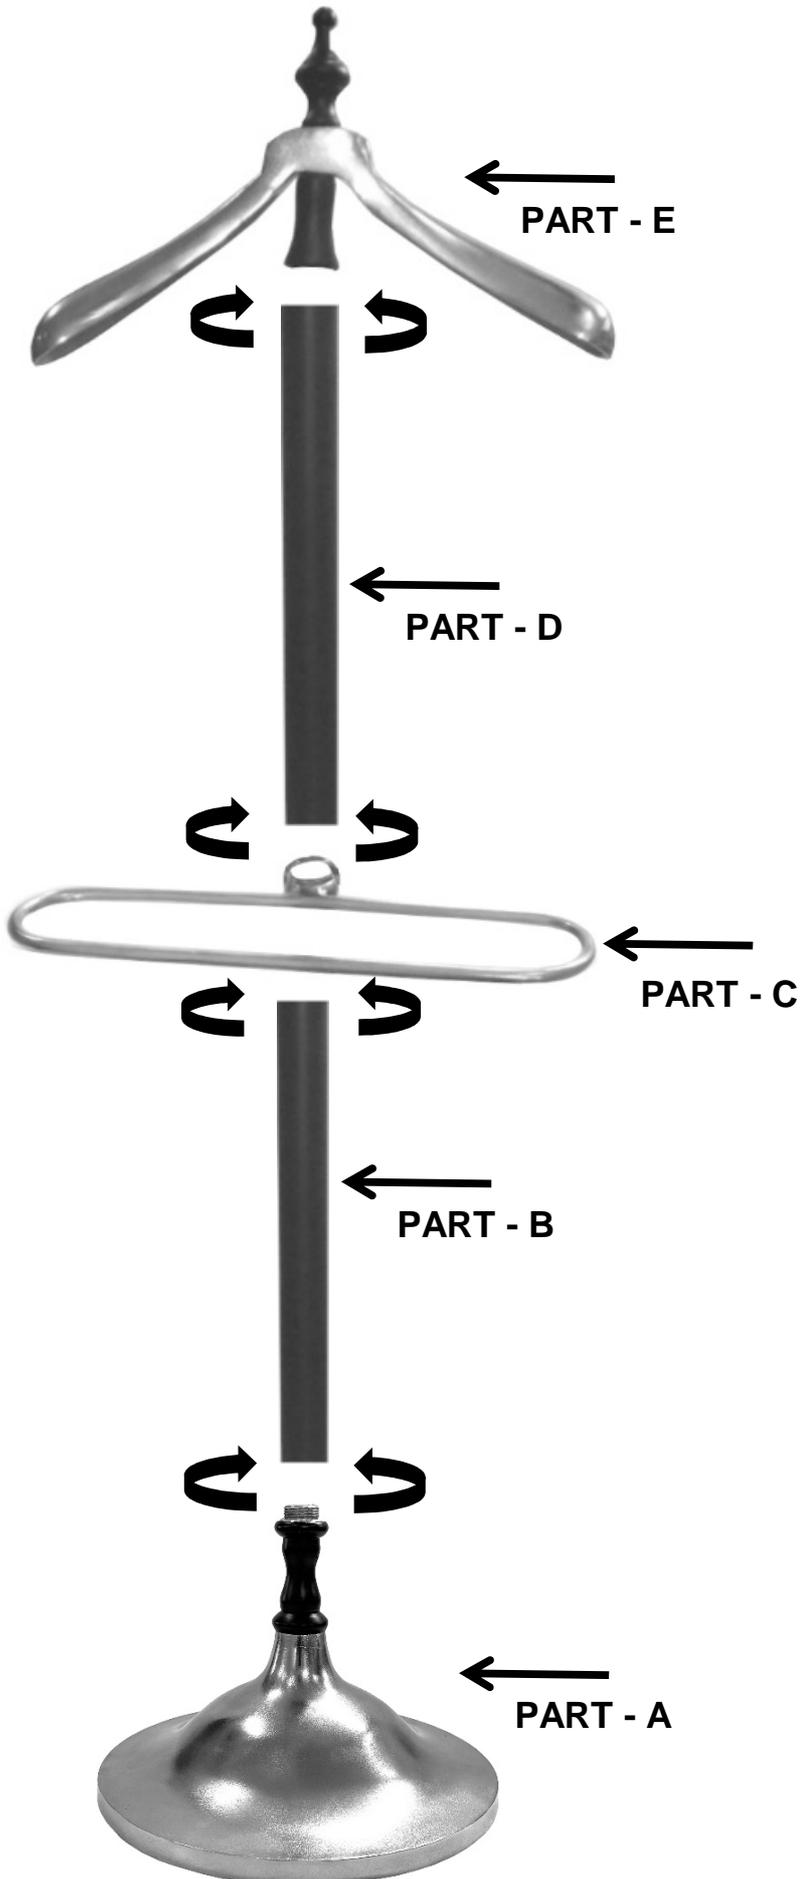

STEP 1 - PUT THE PART A ON PART B, ROTATE THE PART A CLOCKWISE AND TIGHTENED IT ON PART B.
STEP 1 - PUT ALL PARTS C, D, AND E AND ROTATE IN A CLOCKWISE AND TIGHTENED ALL PARTS.
AND AT LAST YOU WILL HAVE ASSEMBLED PRODUCT TO USE.